

Components
SC362403P

Panels:



(2) Floor panels
(open hole sockets)



(3) 1st and 2nd level
panels
(closed hole sockets)

Legs:

(8) 12"

(4) 24"


Accessories:

(2 - Mobile Bars)


STEPMASTER™ ASSEMBLY INSTRUCTIONS

SC362403P 3 STEP PYRAMID/Cart - 36"

Oil all sockets before assembly

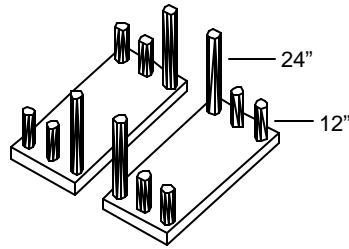


Fully Assembled

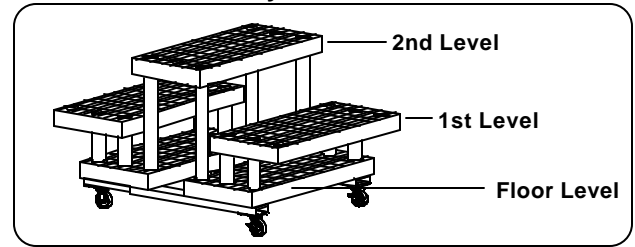

Step 1

Floor level


Lay (2) floor panels (open hole sockets) in position and insert 12" and 24" legs in sockets as shown. (Make sure legs go through to ground).

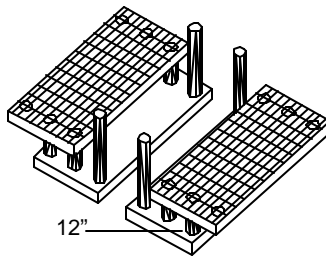

Step 2

1st level

Position the (2) 1st level panels (closed hole sockets) overhanging outside edges as shown. Push down until leg rests on top of socket.

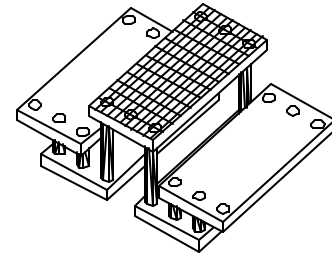


Step 3

2nd level


Position (1) 2nd level panel (closed hole sockets) on (4) 24" legs located in floor panel. Insert legs into outside sockets of 2nd level panel. Push down until leg rests on top of socket.

Mobile Bar

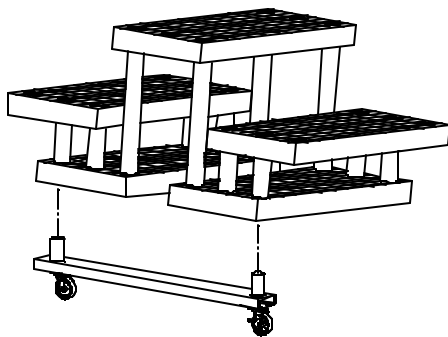

Step 4

After fixture has been built lift either side of fixture and position one mobile bar under the fixture inserting the stems, of the mobile bar, inside the outside sockets of the floor panels as shown. **Caster with brake** may go on either side of fixture.

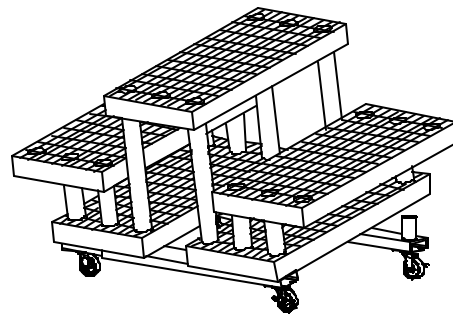

Step 5

Next, repeat **step 5** for the opposite end of fixture as shown.