

STEPMASTER™ ASSEMBLY INSTRUCTIONS

3 SHELF WALL UNIT

Oil all sockets before assembly

Components:

SM363603W-36"

Panels:



(2) Floor Panels
(open hole sockets)




(3) 1st, 2nd and 3rd Levels
(closed hole sockets)

Legs:

(6) - 12"

(4) - 24"

(4) - 36"

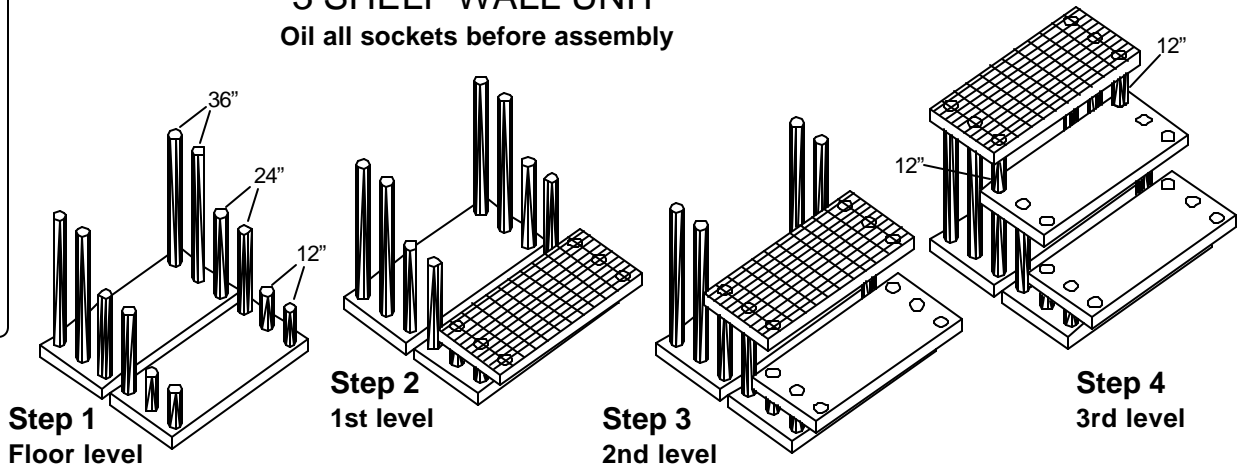

Components:

SM663603W-66"

Panels:



(2) Floor Panels
(open hole sockets)




(3) 1st, 2nd and 3rd Levels
(closed hole sockets)

Legs:

(8) - 12"

(6) - 24"

(6) - 36"

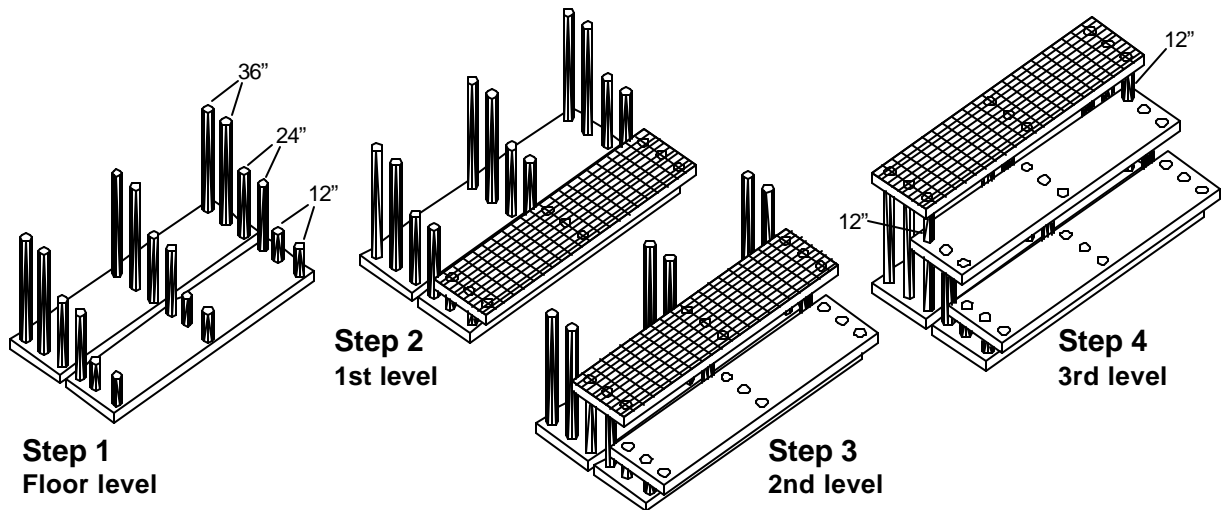

Components:

SM963603W-96"

Panels:



(2) Floor Panels
(open hole sockets)




(3) 1st, 2nd and 3rd Levels
(closed hole sockets)

Legs:

(10) - 12"

(8) - 24"

(8) - 36"

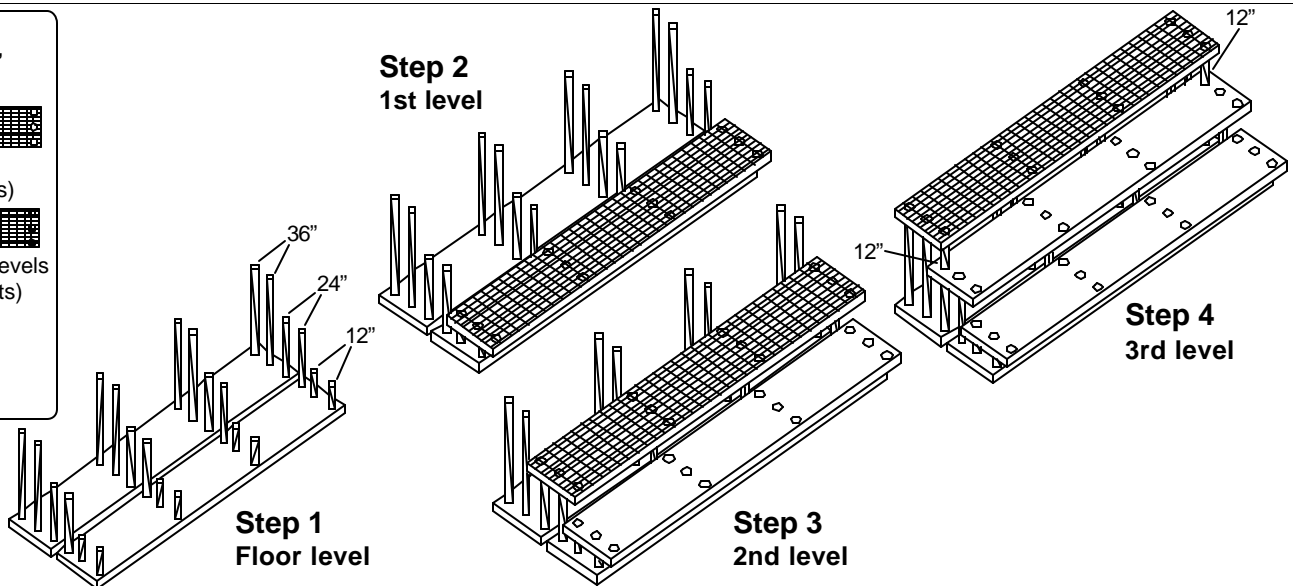

Step 1

Lay floor panels (**open hole sockets**) in position and place legs as shown. (Make sure legs go through to ground).

Step 2 and Step 3

Position the 1st and 2nd level panels (**closed hole sockets**) overhanging outside edges as shown. Push down until leg rests on top of socket.

Step 4

Position the 3rd level panel overhanging outside edge as shown. Next place the (2) remaining **12" legs** in outside corners of panel. Push down until leg rests on top of socket.