
## **ASSEMBLY INSTRUCTIONS** SM967203W

Page 1

open sockets

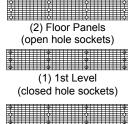

Components:

Panels:

(2) 2nd and 3rd Levels (open center hole sockets)

## Legs:

(16) - 12"(4) - 24"

(4) - 36" (8) - 72"


24" leg 12" leg Step 1

Oil All Sockets


**Before Assembly** 

Floor Level

Place legs as shown. Push legs through to ground.

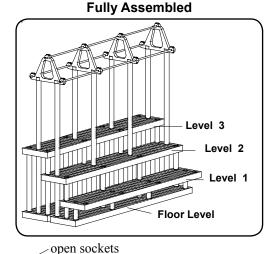

12" leg

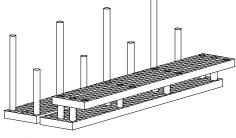


## Step 2 Level 1

Position the Level 1 Panel on 12" legs overhanging outside edge as shown.


Step 3 Level 2

A. Invert Level 2 panel and place (4) 12" legs in outside sockets.

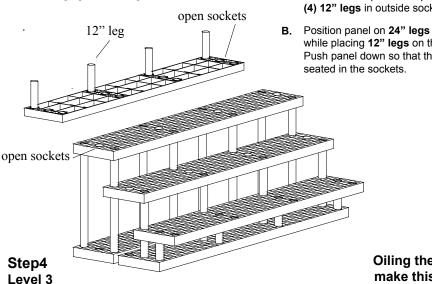

A. Invert Level 3 panel and place (4) 12" legs in outside corners.

Position panel on 36" legs while placing 12" legs on the Level 2 panel. Push panel down so that the **36" legs** are seated in the sockets.

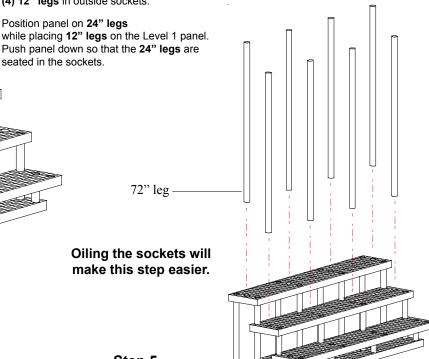


Step 5 **Plant Hanger** 

Insert 72" legs into center open hole sockets of Levels 3 and 2. Slide legs all the way through open hole sockets in floor panels. (Make sure to push legs all the way down to the floor).

## ASSEMBLY INSTRUCTIONS SM967203W

Oil All Sockets Before Assembly Components:
Plant Hanger Top: 4
Plant Hanger Collars: 12
Plant Hanger Poles: 3
Bolts: 24

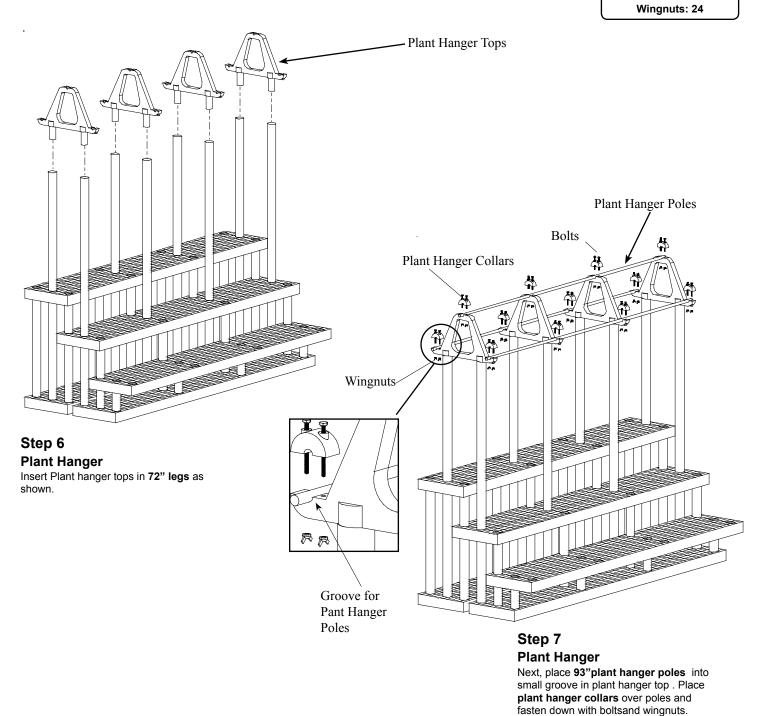

PATENT PENDING