


BenchmasterR ASSEMBLY INSTRUCTIONS


Easy Cube w/ 36" Legs

Oil all sockets before assembly

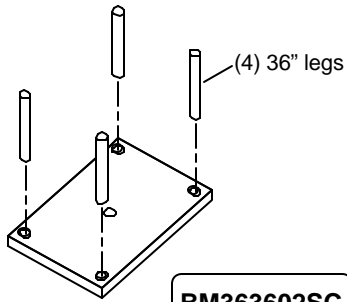


Step 1

BM363602SC

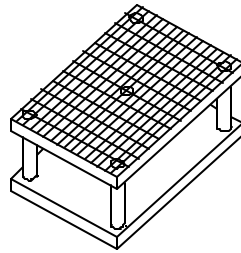


Step 2

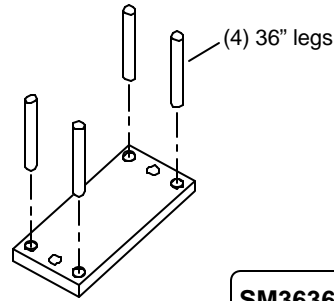


Step 1

SM363602SC

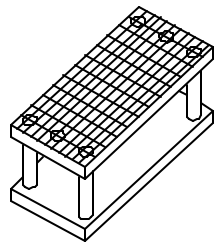


Step 2

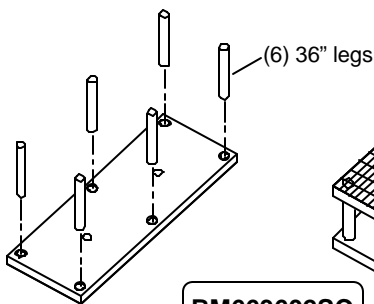


Step 1

BM663602SC

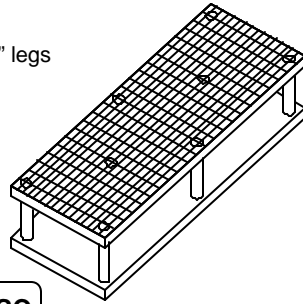


Step 2

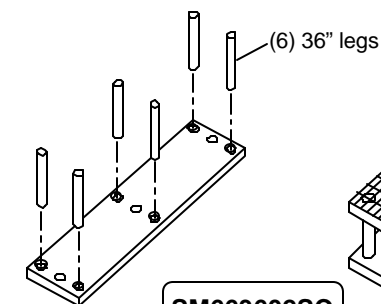


Step 1

SM663602SC

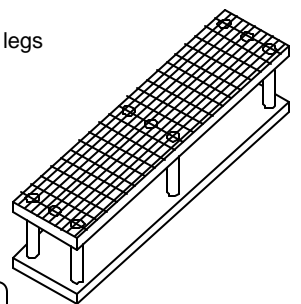


Step 2

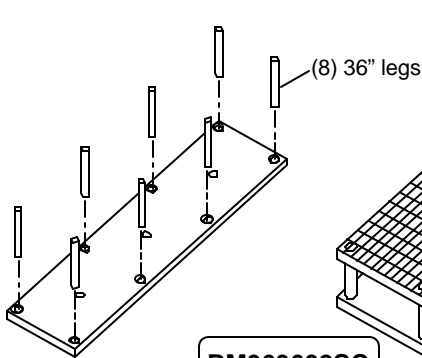


Step 1

BM963602SC

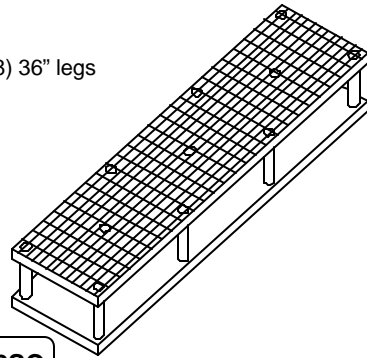


Step 2

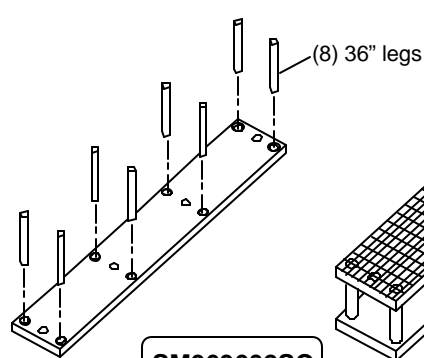


Step 1

SM963602SC

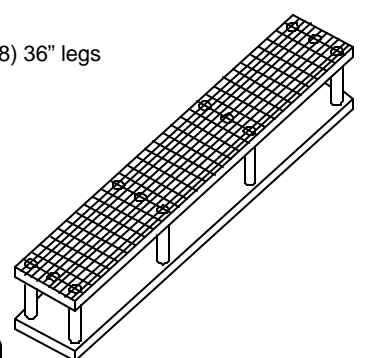


Step 2

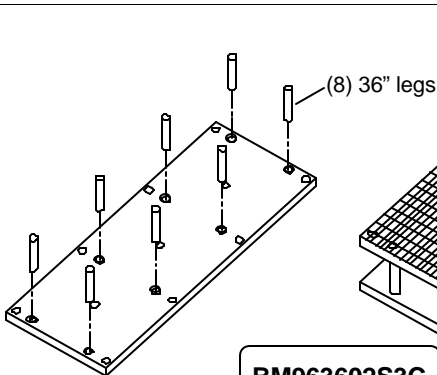


Step 1

BM963602S3C

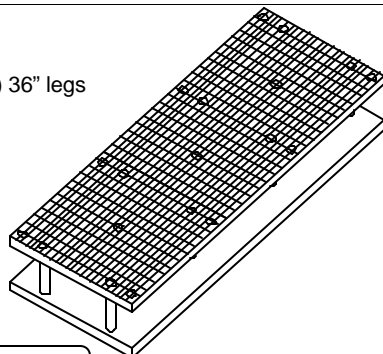


Step 2

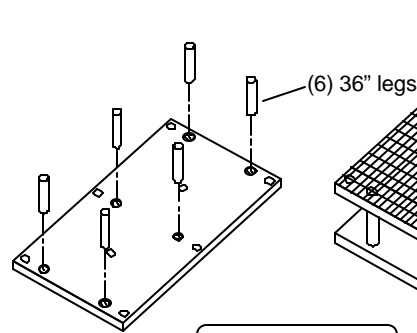

Step 1

BM663602S3C

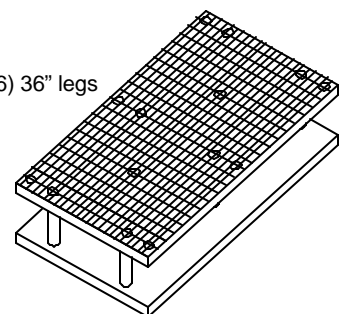

Step 2

Step 1

Place panels with open hole sockets on the floor. Insert 36" legs in each panel as shown. (Make sure legs are pushed all the way down).

Step 2

Place panels with closed hole sockets on legs as shown.